


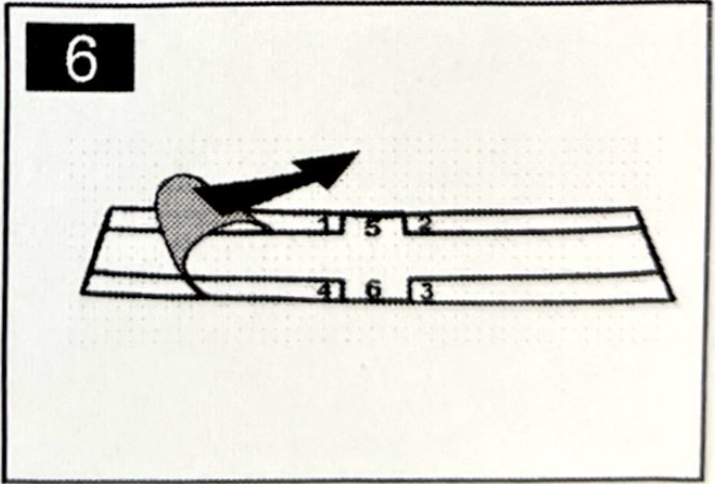
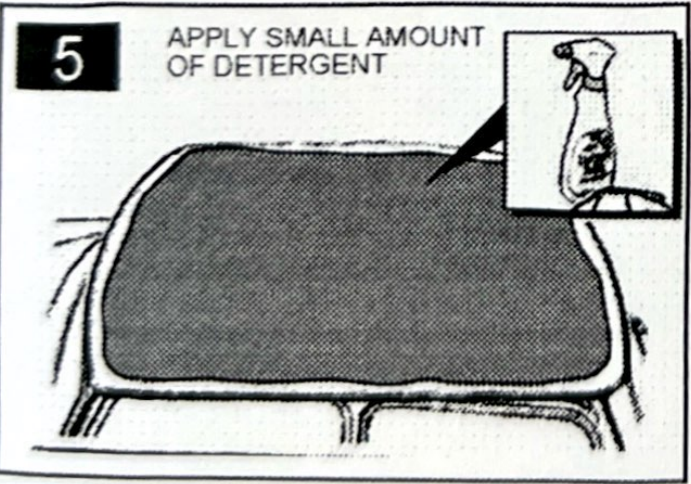
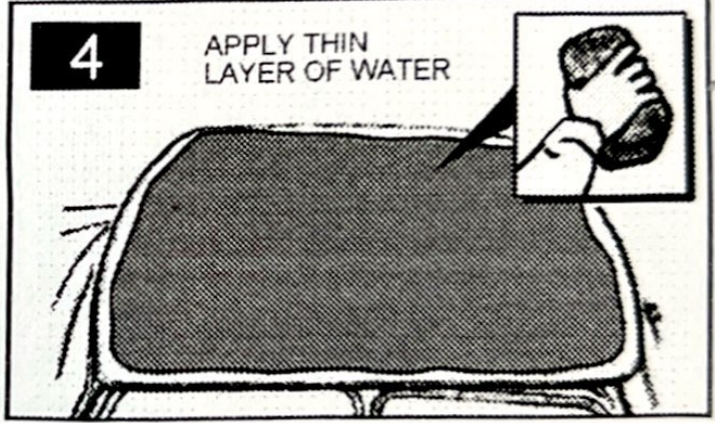
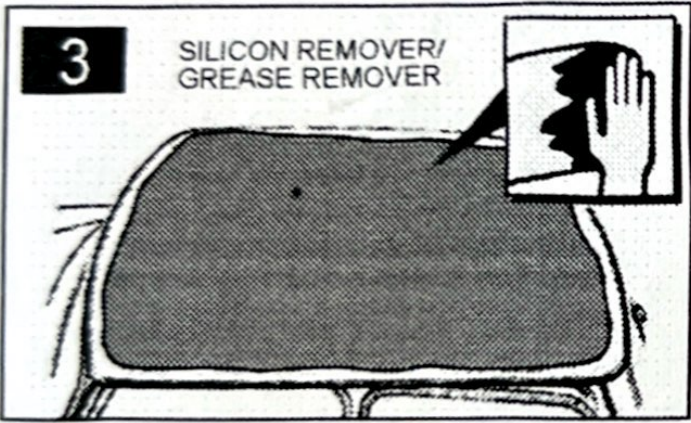
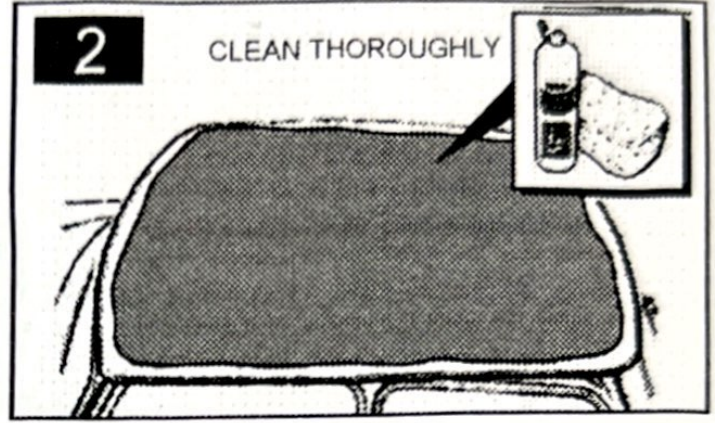
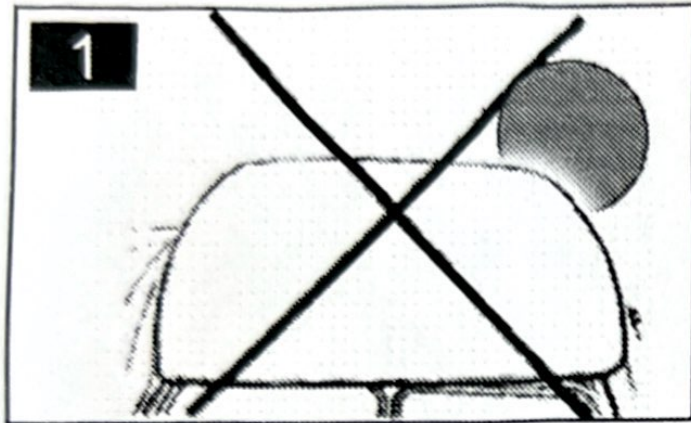
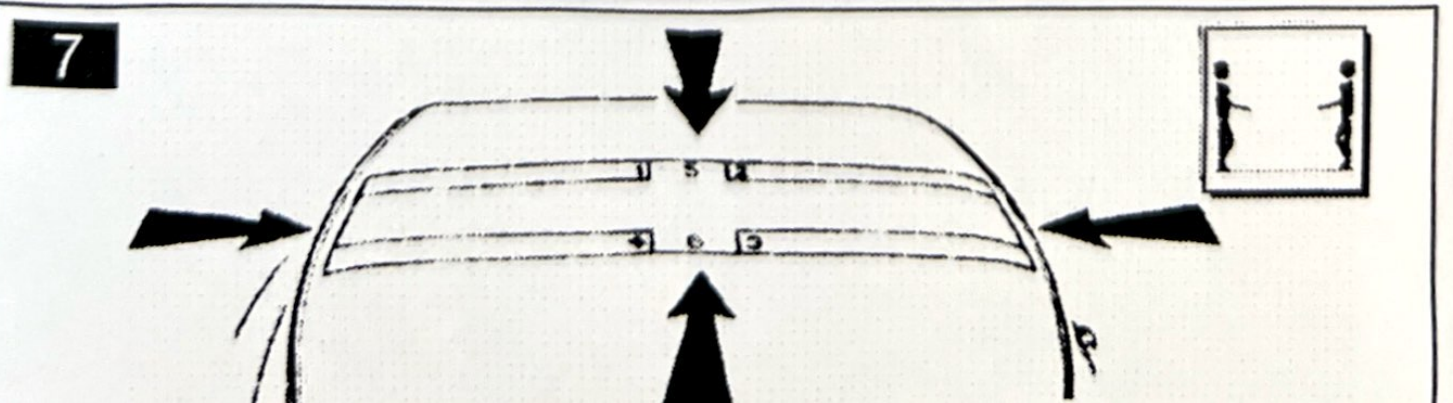
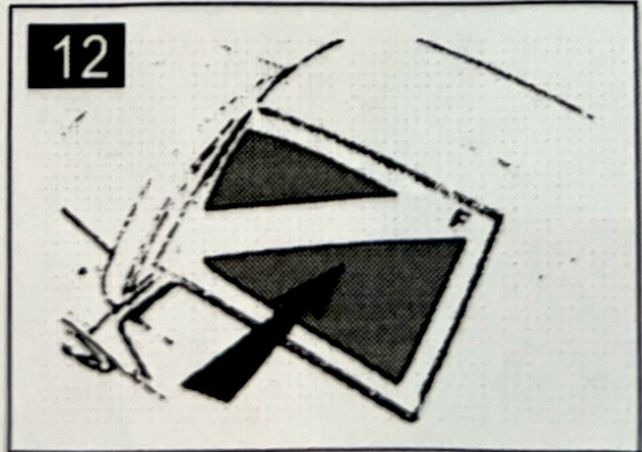
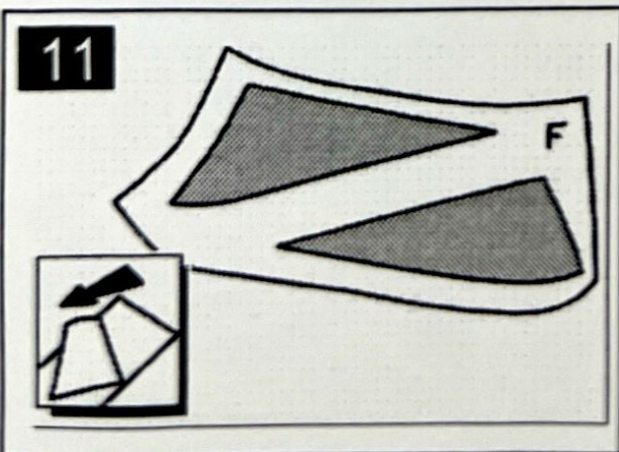










NOTE: SOME PARTS MAY REQUIRE TRIMMING BEFORE FITMENT








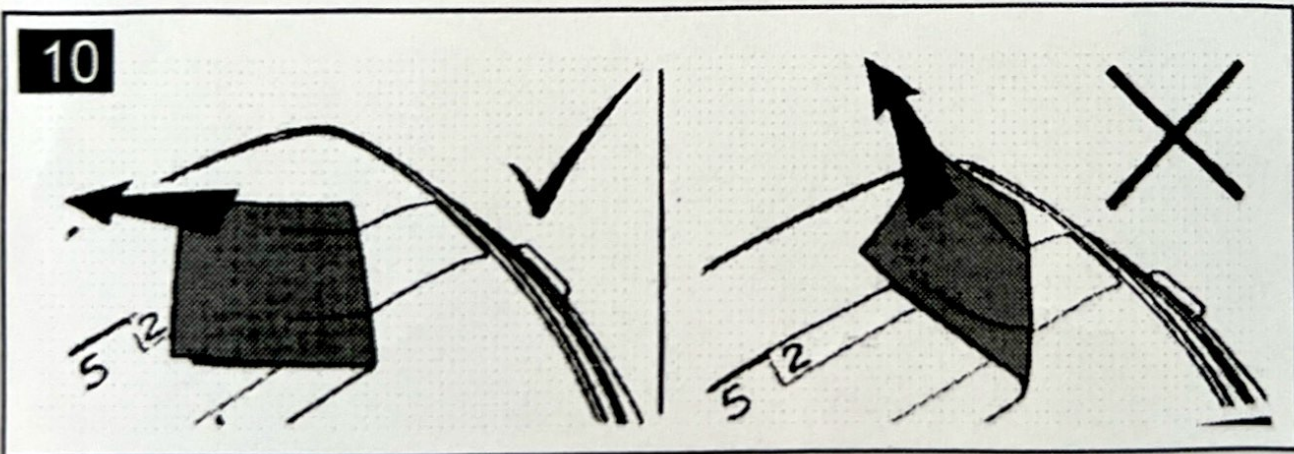






THE FOLLOWING INSTRUCTIONS ARE VALID FOR BOTH SIDES OF THE VEHICLE.

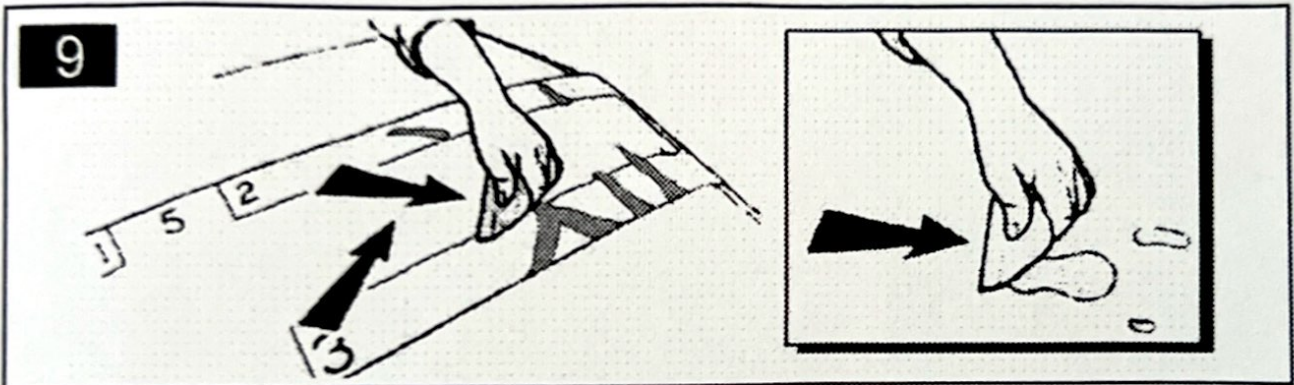

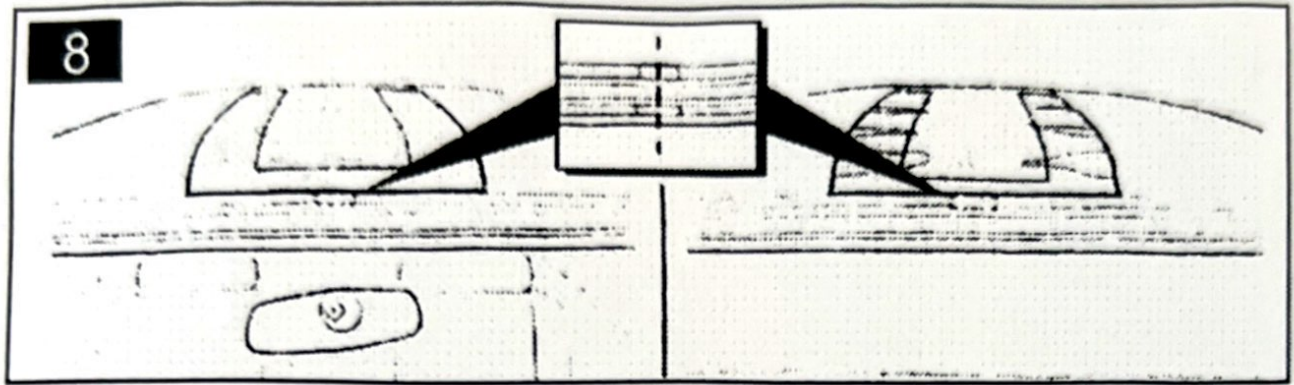

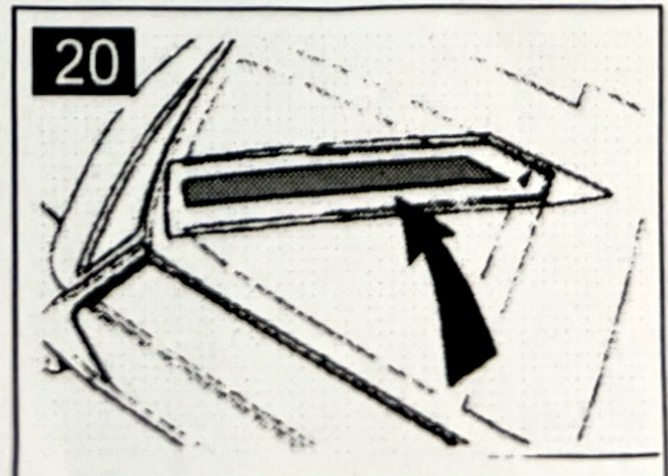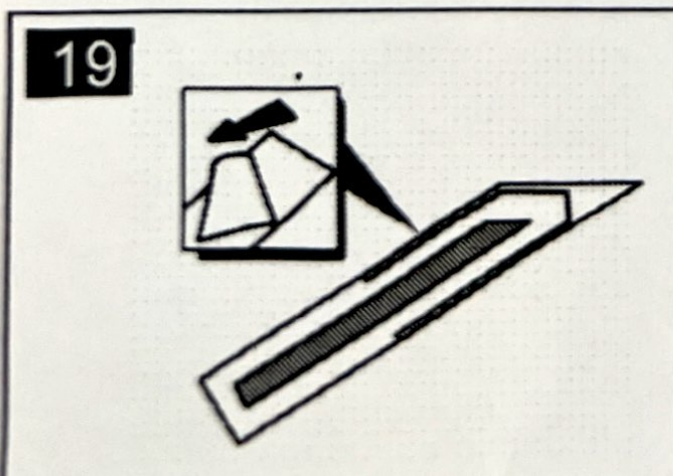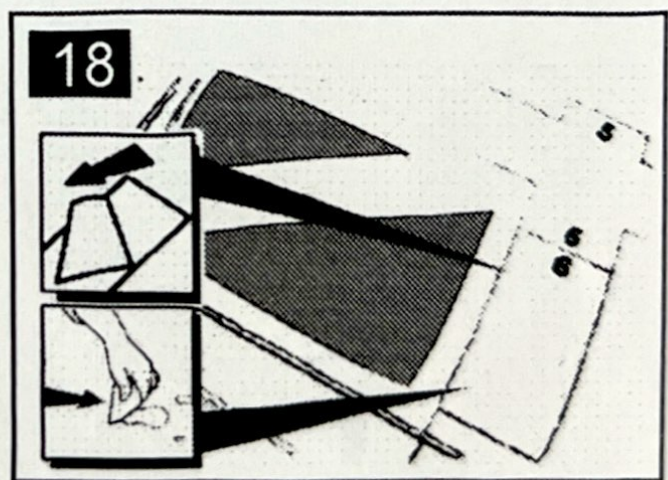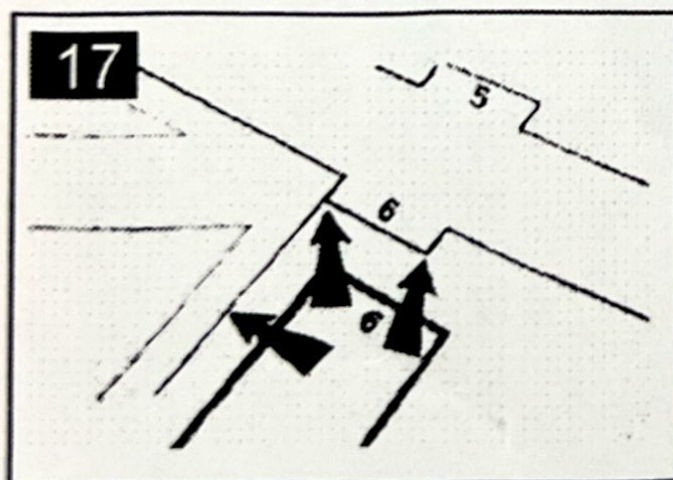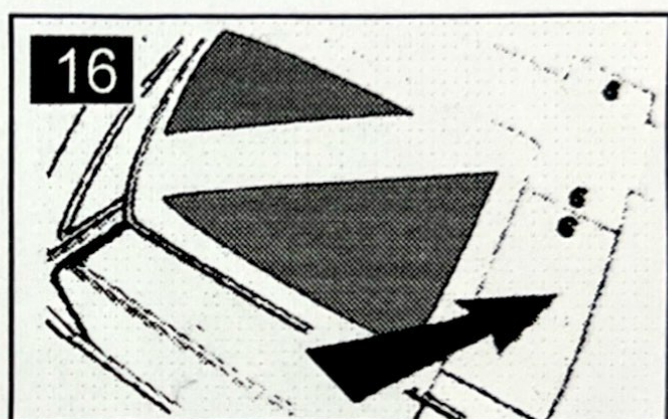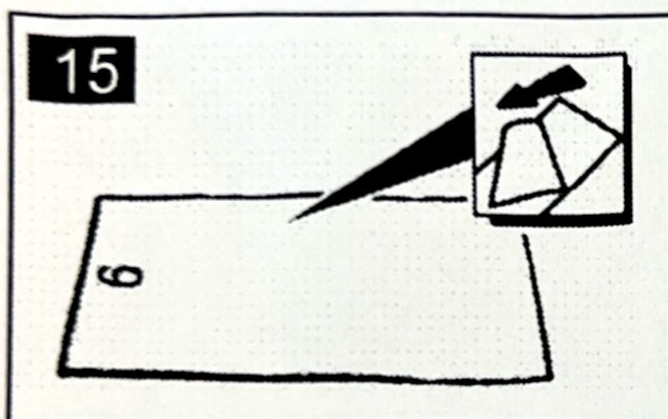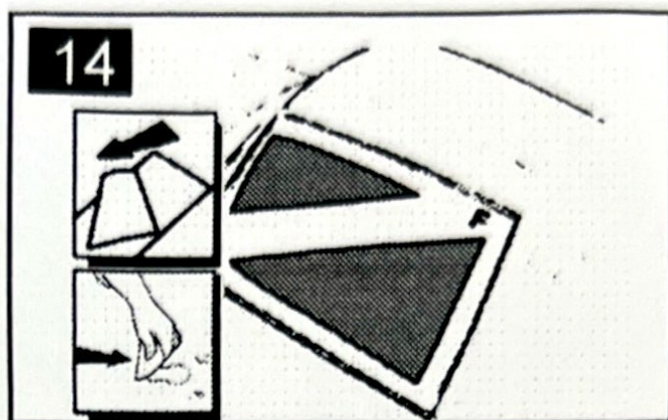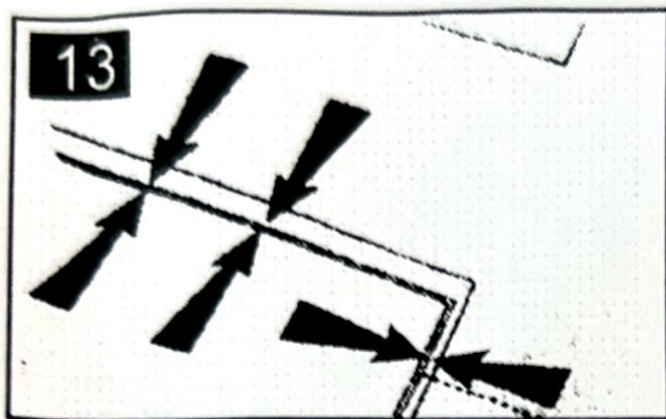

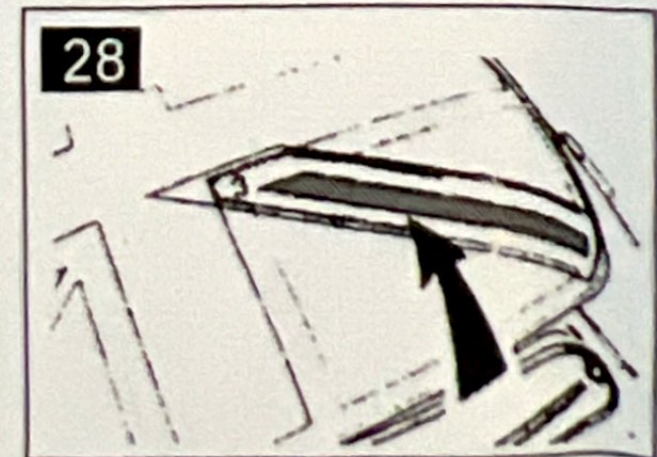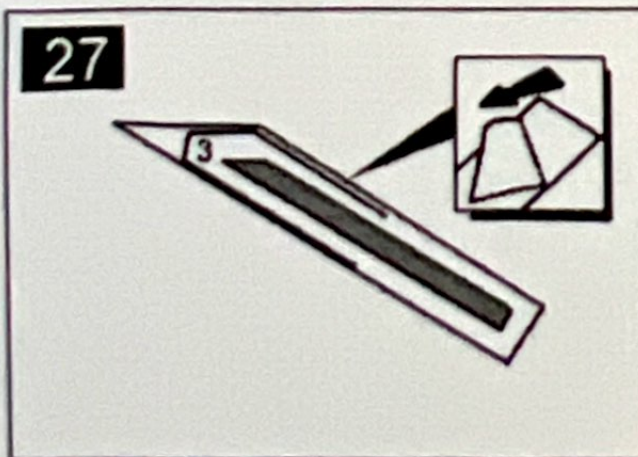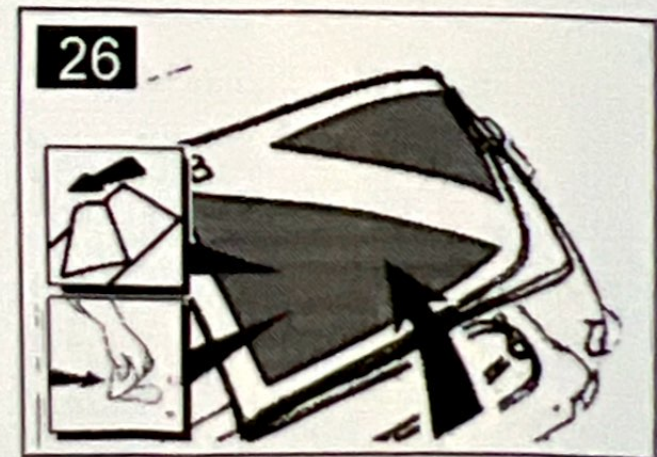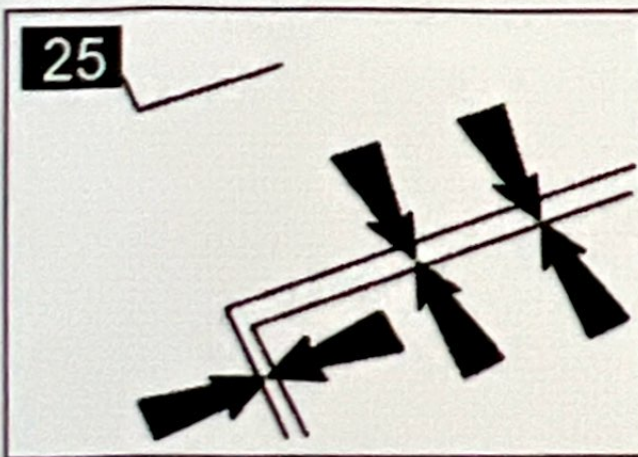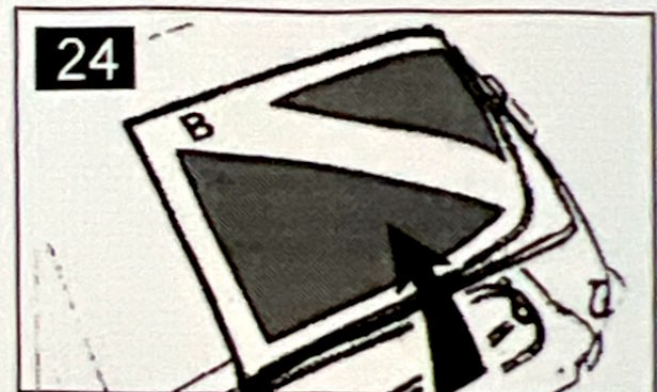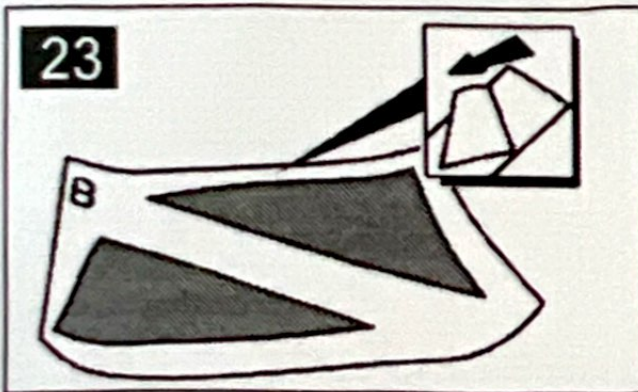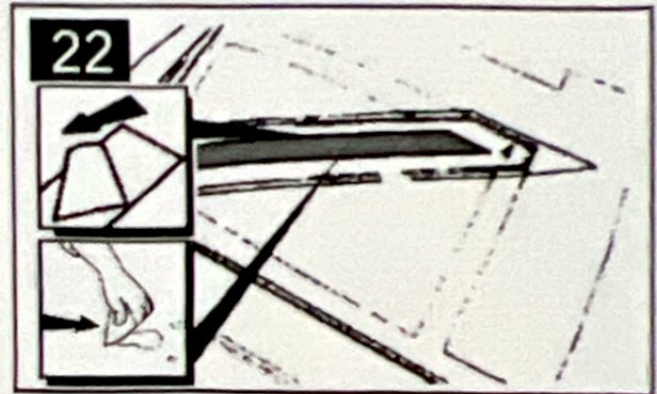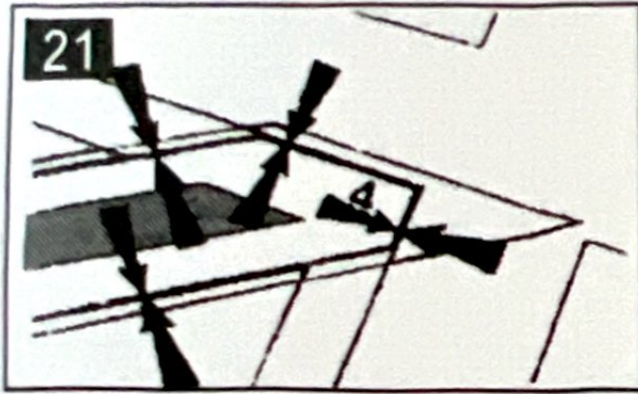

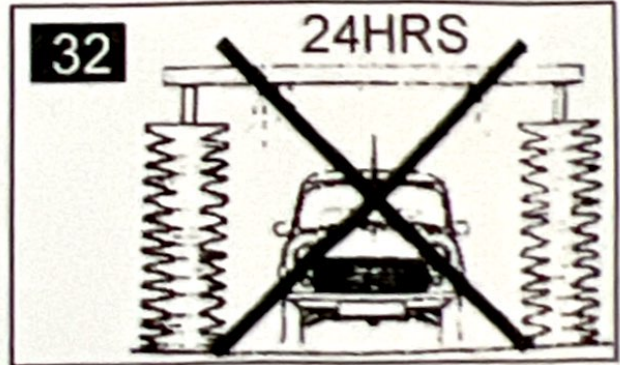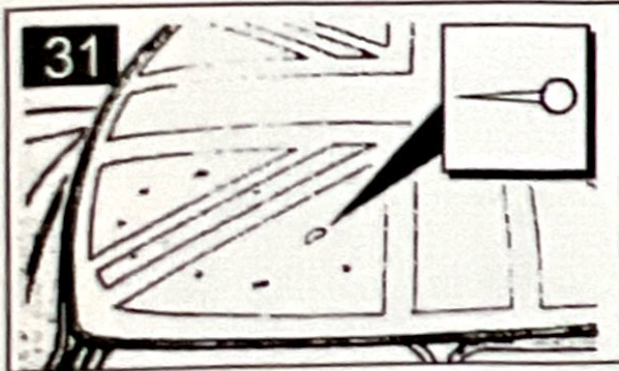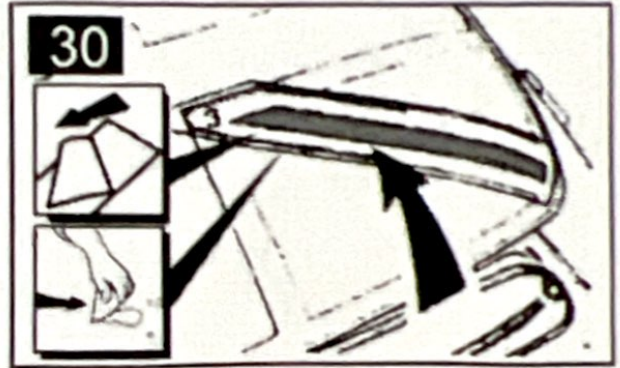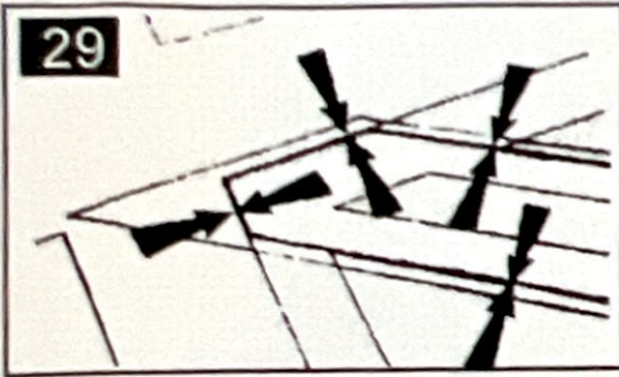

**NOTE: Some parts may require trimming before fitment**